

hans[®]



HANS Device
Quick Start Guide
2022



The HANS Device Quick Start Guide

Welcome - you're ready to use the same technology that protects the world's top racers. Follow these steps to get started.

- Install the helmet tether anchors.
 - Pg. 8 - Helmets with threaded anchor terminals.
 - Pg. 9 - Snell approved instructions for Snell rated helmets without pre-drilled holes.
- Get in your car and try the product with all your safety gear in place and tightened.
- Practice exiting your vehicle wearing all of your safety gear.
- That's it - you should be all set. Questions? Contact us directly. Customer Service number below.

To see list of HANS patents go to simpsonraceproducts.com/patents




www.SimpsonRaceProducts.com
1-800-654-7223 Customer Service
A Simpson Performance Products Company

Copyright © 2022
HANS Performance Products
328 FM 306
New Braunfels, TX 78130
www.HANSDevice.com


Overview

- The HANS Device is worn under your safety harness belts.
- Belt adjusters should rest on or below the lower portion of the HANS Device.
- Change or remove padding for best fit - pads are for comfort only.
- Never modify the body of the HANS Device.

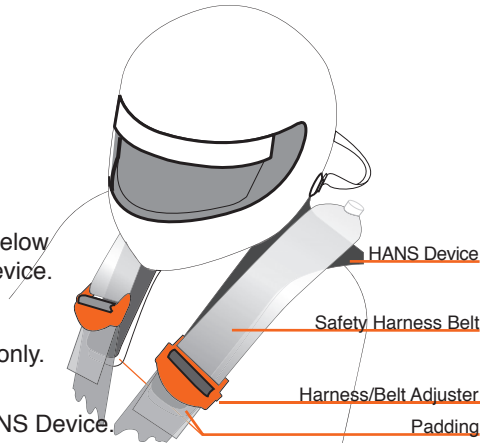

Head Rest Clearance

- The HANS Device may lightly contact helmet or head rest.
- If your HANS pushes your head forward uncomfortably, a more upright device may be required.
- The HANS Device may move back and forth a little during racing.

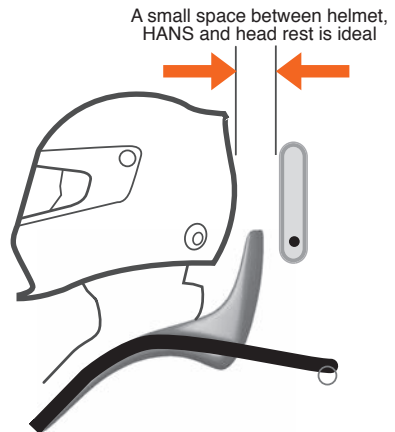

Belt Mounting

- If the mounting points for the belts are far behind the seat, the belt mounts should be very close together



- Belts should wrap around rear of device approx. 10-20 degrees
3-4" (75-100mm) distance between inner edges is typical




- If the mounting points are close to the seat, the width between the inner edges of the belts should be equal to or 1" less than the width of the HANS collar

- HANS works with any 2" or 3" shoulder belts. 3" belts may wrap up HANS Device collar as shown below.




- Mount shoulder belts 10-20 degrees below horizontal.

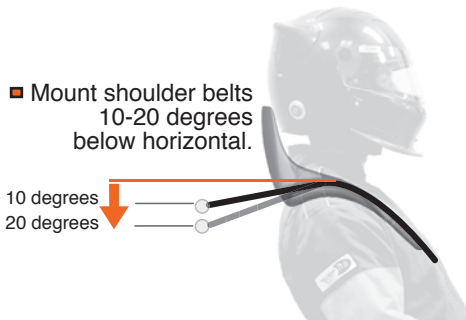

Tethers

- Standard 18" (450mm) length fits most applications.
- Do not over tighten tether carrier screws!
- Tethers are dated. Replace every 5 years, after major impacts or if wear is observed.

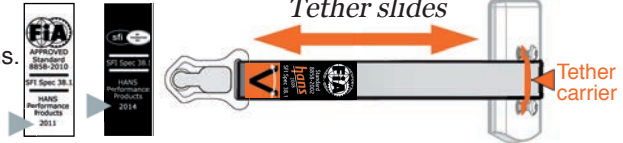

Helmet Anchors

Post Anchor

- To Attach - Align slots in catch with flats on anchor, push in and slide catch rearward.
- To Release - Align slots in catch with flats on anchor, push in and slide catch forward.



Cam shaped anchor collar must face rearward →



SFI, FIA, NASCAR Approved

QuickClick Anchor

- To Attach - Open anchor by pulling orange release strap, slip tether loop over hasp, close.
- To Release - Pull orange release strap and remove tether loop from hasp.



SFI, NASCAR Approved

Quick Release Anchor - M6

- To Attach - Open by pulling yellow release strap, slip metal fitting into anchor, close.
- To Release - Pull yellow release strap, allow metal fitting to slide out of anchor.



SFI, FIA, NASCAR Approved

HANS Adjustable

- These instructions apply to the HANS Adjustable only.
- Devices come pre-adjusted to your order. To change the angle follow these instructions.
- Use the numbers embossed on both sides to help line up legs evenly. Legs must be even with each other to work properly.

1. Remove the epaulet screw using a 5/32" (4mm) Allen (hex) wrench. Remove the epaulet.
2. Remove the main screw using a 5/16" (8mm) Allen wrench. Use the leg removal tool to loosen leg. See pg. 7 for more information on leg removal.
3. Rotate the leg to the desired angle. Repeat with other side. Place on a flat surface to ensure both legs are evenly positioned and level. Legs must be even with each other to work properly.
4. Tighten the main screw on each side. Do not over tighten. Torque spec is 10 lb-ft (1.4 kg-m), or fully seated plus one eighth turn. Install the epaulet screw and tighten until fully seated.



Legs must be even with each other to work properly.



Place on a flat surface to ensure both legs are even and level.

HANS Adjustable

Use only genuine HANS screws.



Main screws secure leg to collar. Epaulet screws secure belt guides. Devices come with 2 of each.

- **Maximum Torque 10 lb-ft (1.4 kg-m) - fully seated plus 1/8 turn.**
- Do not over tighten the main screw.
This screw uses special threads and will not loosen, even in severe use.
- Use a 5/16" (8mm) Allen wrench to tighten.
- Removing leg using leg removal tool.

Leg removal tool.



1. Remove epaulet to expose main screw.



2. Remove main screw.




3. Thread leg removal tool slowly into leg.



4. Tighten tool to slide leg off splines.

Anchor Installation

Most modern helmets have Frontal Head Restraint hardware installed (below).

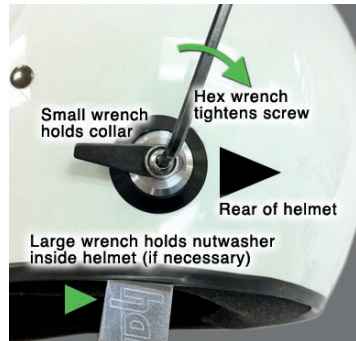

Helmets with Bonded-In Threaded Anchor Terminals

You may have purchased a newer helmet marked Snell SA2020, SA2015, SAH2010, FIA8858, FIA8859 or FIA8860 . These helmets are certified for head restraint systems and have a bonded-in threaded terminal (nutwasher) making HANS anchor installation easy. Screw the anchor into the terminal. Hand tighten until the point on the collar (if Post Anchor) or hasp (if Quick Click) faces rearward. Tighten screw ¼ turn beyond snug.



Snell decal inside helmet



Terminal on side of helmet




THREADLOCKER - All HANS Device anchors are supplied with screws coated with a dry threadlocker compound. You must use threadlocker when assembling HANS helmet anchors.

Anchor Installation Instructions

For Snell rated helmets without pre-drilled holes.

1. Apply masking tape around the bottom of your helmet approximately 1" (25mm) up from the top edge of the rubber molding (fig. 1).
2. On the masking tape at the back of the helmet, mark three points 1.5" (39mm) above the rubber molding and spaced about a half inch apart. Connect the dots to create a horizontal line (fig. 2).
3. Using a flexible ruler, measure the same distance from a fixed point (for example - the visor mounting hole) on each side of the helmet back to the horizontal line (fig. 3). The center line of the helmet is midway between where the two lines intersect the horizontal line at the back of the helmet.
4. Measure 6" (150mm) forward from the rear center line on each side of the helmet to a point 1.5" (39mm) above the rubber molding (fig. 4). Make sure you have two marks (hole centers), each 6" forward from the rear center line and 1.5" above the top edge of the rubber edge molding*.
5. Slowly drill a ¼" (6mm) hole at the two hole centers marked above. Drill through the helmet shell but not through the soft padding. A thin piece of sheet metal can be slipped between the shell and padding to help protect the padding (fig. 5). De-burr and clean the holes.

***Tolerance for the anchor hole is +/- one half inch in any direction.**

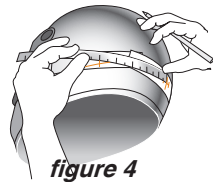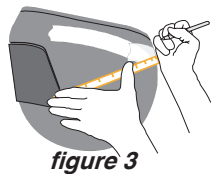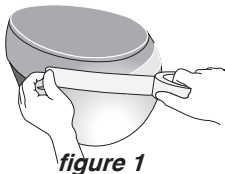

Final Steps.



Post Collar Anchors

- A. Gently pry helmet liner away from shell using blunt instrument (fig. 6) and insert the nutwasher inside the helmet against the shell using a wrench. Align with hole. Insert bolt through collar cap, spring and base and screw into nutwasher. Tighten with the point of the anchor facing rearward.
- B. Use small black wrench to hold the anchor collar outside of the helmet in position and tighten bolt (see pg. 12). Tighten $\frac{1}{4}$ turn beyond snug. The flats of the anchor collar should be parallel with the ground and the point of the anchor should face the rear of the helmet.

M6 and Quick Click Anchors

Gently pry helmet liner away from shell using blunt instrument (fig. 6) and insert the nutwasher inside the helmet against the shell using a wrench. Align with hole. Screw anchor into nutwasher. Hand tighten until the tether faces rearward as desired. Use a $\frac{7}{16}$ " (11mm) wrench to hold the nutwasher inside the helmet. Tighten exterior screw $\frac{1}{4}$ turn beyond snug.

THREADLOCKER - All HANS Device anchors are supplied with screws coated with a dry threadlocker compound. **You must use threadlocker when assembling HANS helmet anchors.**

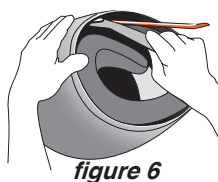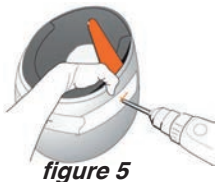

Complete, Correct Anchor Installation



Screw or collar on post anchor style
faces rearward after installation

Hasp / tether on quick click style
faces rearward after installation


Rear of helmet



Rear of helmet



Helmet / Post Anchor Exploded View

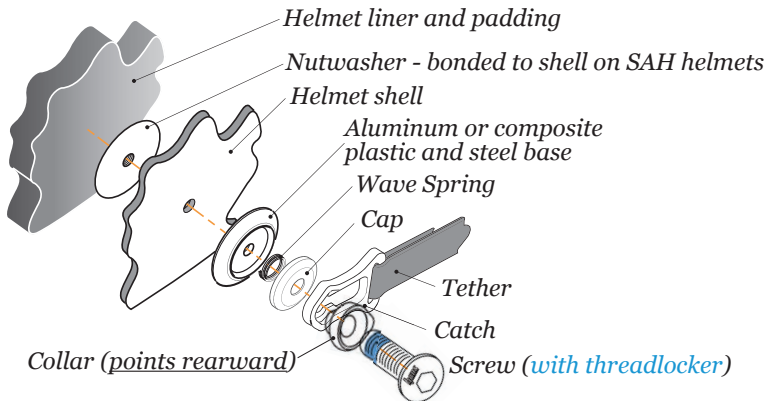

hans[®]

THE BEST INVENTION SINCE THE SEAT BELT THE HANS DEVICE



HANS Performance Products
328 FM 306
New Braunfels TX 78130
www.hansdevice.com